Front USB Ports are not detected

USB ports cable connections may come loose during shipping.

• Make sure all the cables are securely connected. The cables connected from the motherboard to this board may came loose during shipping.