

# Unit has no video

If the E800 is not producing a monitor signal:

- Ensure that the VGA cable is in good working order and connections are secured.
- Replace the monitor/or monitor cable.