

USB

USB

1.
 - USB SATA USB-to-SATA SATA/NIST 800-88 Purge Blancco SSD Erasure SSD Blancco SSD
2.
 - Drive Eraser Configuration Tool
3.
 - USB
 - USB 2.0 USB 3.0
4. ()
 - (510) UI
 -
5. ()
 - / (: -> -> ->)
6. USB
 - USB NUSB NUSB USB
7.
 - 8/ (RAM USB)
8. ()

(USB eSATA FireWire)