

:
(Freeze Lock Removal: FLR) HDDSSD () Blancco Drive Eraser
() Blancco SSD ErasureNIST 800-88 PurgeCryptographic ErasureBSI-GS/EBSI-2011-VS ()
NIST* Purge FLR

FLR
Blancco Drive Eraser (Blancco Drive Eraser) Blancco Drive Eraser GUI
() FLR

:
3

- 1.
Blancco Management Console
Drive Eraser Configuration ToolBlancco Management Console
- 2. ()
Blancco Management ConsoleBlancco Management Console
Drive Eraser Configuration ToolBlancco Management Console
- 3. ()
 - a. Enter1 (12)
 - b.
 - c. BIOS/UEFI
 - i. Suspend-to-RAMS3 mode
 - ii. ACPI Standby StateS3
 - iii. SleepS3 State
 - d. BIOS3BIOS/S3
 - i. Microsoft Surface3TabletBIOS (: 1.50410.218) BIOS (: 1.51116.78) FLR
 - ii. Lenovo X1 (20GHS0S100) BIOS1.55S3BIOS1.57BIOS1.55
 - e. BIOS
 - f.
 - i.
 - ii. 4Blancco
 - iii. Blancco
 - iv. /

UI (Blancco SSD ErasureNIST 800-88 PurgeCryptographic ErasureBSI-GS/EBSI-2011-VS) SECURE ERASE BLOCK ERASE EXT FLRMicrosoft Surface
Pro 33c3d3e3f

- :
- (FLR)
- 1. NISTPurgeNISTClear () *
 - 2. NISTClear *
 - 3. FLR ()
 - 4. HDD ()
 - 5.
 -
 -

NISTClear ClearFLR*

Blancco Drive Eraser.

* NIST 800-88 Clear/Purge Blancco Drive Eraser NIST