

Blancco Drive Eraser 6.10.0 Drive Eraser Configuration Tool 2.10.0

: Blancco Drive Eraser v6.6.0Blancco Management Console v4.7.1



- BMCBDEv6.6.0BMC v4.8.0
- Blancco CloudBDE 6.6.0
- BMC v4.8.0BDE6.6.06.6.0

:

- **ALBUS-5812, ALBUST-542** - : USB
 - USBUSBUSB
- **ALBUS-5818** - :
 - UEFIApple
- **ALBUS-5248** - : Wi-Fi
 - Wi-FiWi-Fi
- **ALBUS-6232** - :
 -
- **ALBUS-6370** - "Server Edition""Volume Edition"
 - SKU BDE "Server Edition" "Volume Edition"
- **ALBUS-5986** -
 - HPADCO

:

- **ALBUS-6602** - USB
- **ALBUS-6558, ALBUS-5760** - HP Smart Array RAIDSATA
- **ALBUS-6373** - HP Smart Array RAIDSATAEnhanced Secure Erase
- **ALBUS-6552** - HP ProLiant DL380p Gen8
- **ALBUS-6259, ALBUS-5953** -
- **ALBUST-534** -
- **ALBUST-547** - "Hardware Edition"
- **ALBUS-6671** - AMD Ryzen CPULenovoPCBDE
- **ALBUS-6670** - NvidiaASUSPCBDE
- **ALBUS-6619** -
- **ALBUS-6617** - Ryzen CPUAcerPCBDE
- **ALBUS-6549** -
- **ALBUS-6314** - XMLOPAL
- **ALBUS-5341, ALBUS-5770, ALBUS-6708** - Microsoft SurfaceMicrosoft Surface ProDell Optiplex All-in-OneApple MacBookApple MacBook Pro Air
- **ALBUS-5657, ALBUS-5761, ALBUS-5691, ALBUS-5108, ALBUS-5347, ALBUS-5610** - HPADCO