

# /Blancco Mobile Diagnostics and Erasure

/Blancco Mobile Diagnostics and Erasure

NVIDIA

GRUBelinux (loop)/arch/boot/immu=pt nouveau.modet=0 () Ctrl + XF10

```
GNU GRUB version 2.00
# Copyright (C) 2015 Free Software Foundation, Inc.
#
# This program is free software: you can redistribute it and/or modify
# it under the terms of the GNU General Public License as published by
# the Free Software Foundation, either version 3 of the License, or
# (at your option) any later version.
#
# This program is distributed in the hope that it will be useful,
# but WITHOUT ANY WARRANTY; without even the implied warranty of
# MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.  See the
# GNU General Public License for more details.
#
# You should have received a copy of the GNU General Public License
# along with this program.  If not, see <http://www.gnu.org/licenses/>.
#
# If needed, the following parameter line can be modified, however parameters
# between lines ... archiso/bootimg ... should not be changed.
# These should be: linux (loop)/arch/boot/immu=pt nouveau.modet=0 () Ctrl + XF10
# Changes to other variables are stored to the boot configuration and are
# persistent, default defaults are shown here:
linux (loop)/arch/boot/immu=pt nouveau.modet=0 () Ctrl + XF10
initrd (loop)/arch/boot/immu=pt nouveau.modet=0 () Ctrl + XF10
```

Blancco Mobile Diagnostics and Erasure

GRUBelinux (loop)/arch/boot/immu=pt nouveau.modet=0 () Ctrl + XF10