

# No drive(s) detected in the E800 drive bays (no drives showing in the Blancco 5 GUI)

There are three different methods to check drive connectivity:

1. Controller (HBA) Check via CLI
2. Hard Drives check via CLI
3. Controller (HBA) and drive check via HBA BIOS