

Blancco Drive Eraser

Blancco Drive EraserBlancco 5 (5.8.0)

Blancco Drive EraserBlancco Drive EraserBlancco 5Blancco

YYYYMMDD_HHMMSS_issue_report.ir.xml

xml

Generated by Blancco Drive Eraser Crash Reporter

Blancco Drive EraserUSBUSB

- USBUSB2-3USBUSBLED
 - Blancco 5 USB
 - USBroot

YYYYMMDD_HHMMSS_issue_report.ir.xml

- USB
- USB
 - USBBLANCCOFAT32
 - USB

Blancco Drive EraserUI

USB

1. Blancco USB CreatorUSB
2. USB
3. (FLR nativesafemessages)
4. e
 - a. **5.85.10:** linux /isolinux/vmlinuz ...crmemtest=00metest=00 cr ()
 - b. **6.1:** linux /arch/boot/x86_64/vmlinuz ...crflrflr cr ()
5. Ctrl + x F10

CDMSI

1. FAT32USB
2. USBBLANCCO
3. MSI)
4. Blancco
5. (FLR nativesafemessages)
- 6.
7. cr

(cr) (early booting report) Linux Blanccoeearly booting report

Early booting reportUSBdebug_info.tar.gzBLANCCOUSBBlancco Drive EraserUSBBlancco Drive Eraserearly booting report22

LinuxBlancco Drive EraserUSB