

Blancco Drive Eraser ()

22 Dec 2022			N/A

Blancco Drive Eraser

Blancco Drive EraserBlancco Drive Eraser



- 1. (FLR during startup) e
- 2. : linux /arch/boot/x86_64/vmlinuz img_dev=...
- 3. flr: flr=forced nouveau.modeset=0
 - a. ==^
- 4. Ctrl + XF10

Blancco Drive Eraser Image Configuration ToolBlancco Drive EraserISO



- 1. Blancco Drive Eraser ISOOS () Customized startup
- 2.

起動オプション

既定

Customized startup

コマンドライン

archisobasedir=arch archisolabel=BLANCCO copytoram cow_spacesize=2G vmlloc=400M memtest=00 flr=disabled noapic nomodeset intremap=r

NVIDIA GPU

NVIDIA GPU

HP	ZBook Studio G3
HP	ZBook 17 G3
HP	ZBook Studio G5
Dell	Precision 7540
Dell	Precision 7550

nouveau.modeset=0

... flr=forced nouveau.modeset=0

Drive Eraser Configuration Tool:

起動オプション

既定

Customized startup

コマンドライン

archisobasedir=arch archisolabel=BLANCCO copytoram=y cow_spacesize=50% memtest=00 vmlloc=400M nouveau.modeset=0

nouveau.modeset=0nouveau.modeset=0

rd.driver.blacklist=nouveau
modprobe.blacklist=nouveau

AMD GPU

AMD GPU

HP	ProBook 445 G6 (AMD Ryzen 3)

rd.lvm=0 nvme_core.default_ps_max_latency_us=0

```
... flr=forced rd.lvm=0 nvme_core.default_ps_max_latency_us=0
```

Drive Eraser Configuration Tool:

起動オプション

既定

Customized startup

コマンドライン

archisobasedir=arch archisolabel=BLANCCO copytoram=y cow_spacesize=50% memtest=00 vmlloc=400M rd.lvm=0 nvme_core.default_ps_max_latency_us=0

Apple

Apple T2Intel MacBlancco Drive Eraser

(Intel + AMD/ATI)

(IntelAMDATI)

Dell	Vostro 3350

radeon.runpm=0

```
... flr=forced radeon.runpm=0
```

Drive Eraser Configuration Tool:

起動オプション

既定

Customized startup

コマンドライン

archisobasedir=arch archisolabel=BLANCCO copytoram=y cow_spacesize=50% memtest=00 vmlloc=400M radeon.runpm=0

DELL iDRAC

DELLiDRACBlancco Drive Eraser 7iDRAC

y

--	--

Dell	PowerEdge R630
Dell	PowerEdge R6515

vga=791

```
... flr=forced vga=791
```

Drive Eraser Configuration Tool:

起動オプション

既定

Customized startup

コマンドライン

archisobasedir=arch archisolabel=BLANCCO copytoram=y cow_spacesize=50% memtest=00 vmlloc=400M vga=791

FLR

() Blancco Drive Eraser () GUI

- 1. 2Normal startup (native resolution)
- 2. () Normal startup (safe resolution)
- 3. Blancco Drive Eraser4Show startup messages

- Blancco Management Console
- Blancco Management Console
- - 1Blancco Drive Eraser
 - BIOS/UEFI
 -
 - Blancco (Blancco)