

Blancco Drive Eraser 7NVMe

22 Dec 2022		7.6.1	7.7.0

NVMeBlancco Drive EraserNVMeNVMe

Blancco Drive Eraser v7.5.1v7.6.0v7.6.1 (Configuration Tool v3.5.1v3.6.0) NVMeNVMeNVMeNVMe

Drive Eraser v7.5.1v7.6.0v7.6.1

- 1. NVMe
- 2. NVMe
- 3. NVMe

Drive Eraser 7.7.0

Drive Eraser Configuration Tool:

- NVMe () :pci=pcie_bus_safe,realloc nvme.reconfigure_before_reset=1
- TCG () :flr rd.udev.log-priority=3 loglevel=0 libata.allow_tpm=1

:

archisobasedir=arch archisolabel=BLANCCO copytoram=y cow_spacesize=50% memtest=00 vmlloc=400M flr rd.udev.log-priority=3 loglevel=0 libata.allow_tpm=1 pci=pcie_bus_safe,realloc nvme.reconfigure_before_reset=1

- 1. Drive Eraser Configuration ToolBlancco Drive Eraser ISO
- 2. OSCustomized startup
- 3.

起動オプション

既定

Customized startup

コマンドライン

archisobasedir=arch archisolabel=BLANCCO copytoram=y cow_spacesize=50% memtest=00 vmlloc=400M

- USBInstaller (Blancco Drive Eraser)
- USB

Customized startupNVMe