

/Blancco Mobile Diagnostics and Erasure

/Blancco Mobile Diagnostics and Erasure

NVIDIA

GRUBelinux (loop)/arch/boot/immu=pt nouveau.moderset=0 () Ctrl + XF10

```
GNU GRUB version 2.02
# Copyright (C) 2015-2016, Blancco Mobile Diagnostics and Erasure
#
# This program is free software; you can redistribute it and/or
# modify it under the terms of the GNU General Public License
# as published by the Free Software Foundation; either version 2
# of the License, or (at your option) any later version.
#
# This program is distributed in the hope that it will be useful,
# but WITHOUT ANY WARRANTY; without even the implied warranty of
# MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
# GNU General Public License for more details.
#
# You should have received a copy of the GNU General Public License
# along with this program; if not, write to the Free Software
# Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA
# 02110-1301, USA.
#
# If needed the following parameter line can be modified, however parameters
# between lines ... archiso/bootimg/... should not be changed.
# These should be: linux (loop)/arch/boot/immu=pt nouveau.moderset=0 () Ctrl + XF10
# Changes to other variables are stored to the boot configuration and are
# persistent, default defaults are:
#
# linux (loop)/arch/boot/immu=pt nouveau.moderset=0 () Ctrl + XF10
# initrd (loop)/arch/boot/immu=pt nouveau.moderset=0 () Ctrl + XF10
```

Blancco Mobile Diagnostics and Erasure

GRUBelinux (loop)/arch/boot/immu=pt nouveau.moderset=0 () Ctrl + XF10